3-Port 10/100Mbps Fast Ethernet Printer Server

FPS-3300

Quick Installation Guide

Table of Contents

Package Content	3
Physical Installation	3
Print Server Setup	4
Jtility Installation	5
Windows Peer-to-Peer Printing	5
Install Peer-To-Peer Print Driver	5
Macintosh (AppleTalk)	8
Further Configuration	8

This Quick Installation Guide contains brief instructions for the following environments:

- Windows 95/98/Me/NT/2000/XP/Sever 2003 Peer-to-Peer Networks
- Macintosh (AppleTalk)

For other environments, or any problems, please refer to the full User's Manual in the CD-ROM.

Package Content

- 1 x FPS-3300
- 1 x Quick Installation Guide
- 1 x Drivers and User's Manual CD
- 1 x Power Adapter

Physical Installation

- 1. Make sure the print server is power OFF then connect printer to the Print Server's printer port.
- 2. Connect the LAN cable to the proper connector of the Print Server.
- 3. Connect the other end of the LAN cable to a 10Base-T or 100Base-TX hub or switch.
- 4. Connect the supplied Power Adapter.
- 5. Please make sure the POWER and LINK LED are light on.

Print Server Setup

In the following situation, you do not need to configure the Print Server. Just follow the procedures in below section to share your printer.

Windows users:

• Already installed TCP/IP protocol.

Apple Macintosh users:

• Already installed AppleTalk protocol.

Utility Installation

>> Windows Peer-to-Peer Printing

Install Peer-To-Peer Print Driver

- 1. Insert Drivers and User's Manual CD into the CD-ROM drive to initiate the autorun program. Once completed a menu screen will appear.
- 2. Click on "Install Utility" hyper link to initiate the installation. Or you can click the "Start" button and choose "Run". (Suppose "E" is your CD-ROM drive). When the dialog box appears, enter "E:\Utility\Setup.exe" and press enter key. You will see the dialog box as below. Please click "Next" to continue.

L L	Welcome to the Network Print Server Setup Wizard
Welcome	This Wizard guides you through the installation of the Network print server that is connected to the local area network on this computer.
Select A Print Server	
Change Settings	Before you proceed, make sure the print server and the printer are properly connected and turned on.
Configure Wireless	
Configure TCP / IP	To continue, click Next.
Save Settings	
Select a Printer	Version 0.95.01
Summary	
Complete	

3. In Select A Print Server screen, please select the print server and its port number that your printer connected and click "Next". If you can not find your printserver in the list, please press "Refresh" button to scan you network again.

H I	Select A	Print Serv	er	
Welcome			print servers on the ne set up from the list.	twork.
Select A Print Server	Detected print serv	ers on your local r	network :	
	Device Name	IP Address	MAC Address	Port Sta
Change Settings	3P_PrintServer	192.168.0.10	00:30:4F:1D:80:53	1 Ok
	3P_PrintServer	192.168.0.10	00:30:4F:1D:B0:53	2 Off
Configure Wireless	3P_PrintServer	192.168.0.10	00:30:4F:1D:B0:53	3 Off
Configure TCP / IP Save Settings				
Select a Printer	<			1
Select a Printer	If the print server v	ou want to set up i	s not displayed.	Refresh
Summary	check the connecti	on and click Refre	sh.	
Complete		int server to initial	een turned on, it may ta ize before it can be det	

4. In Change Settings screen, please select "No, " and press "Next" to continue.

Network Print Server Setu	ıp Wizard	×
1	Change Settings	
Welcome Select A Print Server	This Wizard allows the network administrator to change some basic settings of the print server. If you are not the network administrator, do not change settings. Wrong settings may cause the print server not to function properly.	
Change Settings Configure Wireless	○ Yes, I want to change settings. Password :	
Configure TCP / IP Save Settings Select a Printer	(No, I don't want to change settings)	
Summary Complete	To change settings, you must enter the password. A brand-new Network print server has no default password. If you are configuring a wireless print server and it's now operating in Diagnostic mode, you don't need to enter the password.	
	< Back Next> Cance	el

5. In the Select A Printer screen, please select the printer that is connected on the print server port which you selected in step 4 from the list, click "Next".

π .	Select A Printer	
Welcome	The Wizard now helps you set up the printer print server. You can either select a printer th installed on this computer or add a new prin	iat has already been
elect A Print Server	Select a printer from the following list	Add New Printer
Change Settings	Printer Name	Port
Configure Wireless	HP LaserJet 6L	LPT1:
Configure TCP / IP		
Save Settings		
Select a Printer		
Summary		
Complete	To add a new printer, you need a printer ins the driver file that you've downloaded from f	

6. Please check the information of Summary screen. click "Next" to continue.

etwork Print Server Setup	Wizard
1	Summary
Yelcome	The Wizard is about to finish the installation. Following is the summary of the settings.
Select A Print Server	Printer Name : HP LaserJet 6L Port Name : LPT:PS8053-1
Change Settings	IP Address : 192.168.0.10
Configure Wireless	
Configure TCP / IP	
Save Settings	Printer Setting
Select a Printer	Use this printer as the default printer
Summary	
Complete	Verify all information.
	< <u>B</u> ack Next> Cance

7. Please click "Finish" to complete the print server installation.

Network Print Server Setu	p Wizard	×
ц Ц	Installation Complete !	
Welcome	The Wizard has successfully installed Network print server and the printer on your system.	
Select A Print Server		
Change Settings		
Configure Wireless		
Configure TCP / IP		
Save Settings Select a Printer		
Select a Printer Summary		
Complete		
	< Back Finish Cancel	

>> Macintosh (AppleTalk)

- 1. Click the Apple icon and then Control Panel Network.
- 2. Ensure that EtherTalk is selected under AppleTalk Connection.
- 3. Click Chooser. The Chooser panel will open.
- 4. Click either the LaserWriter 8 icon (recommended) or the LaserWriter 7 icon.
- 5. Select a Print Server from the printer list. Print Server names appear in the form PSxxxxxx (PS followed by 6 digits), as recorded on the base of the Print Server.
- 6. Click the Close box. Configuration is now complete.

>> Further Configuration

Please refer to the manual of our bundle CD for more detail configuration of this print server.