











## WNRT-626G

STEP 5: Open web browser, type the default IF address <u>(http://192.168.0.1)</u>	
User name: "admin" Password: "admin"	
Connect to 192.168.0.1	
Default: admin/admin	
User name: 😰 admin	
Password:	
Remember my password	
OK Cancel	
	J

TEP 7: Select '	"Time Zone" corresponding to you
country	. Click "Next" to continue
Time Zone 👔	
Set the time zone of the Wireless Ro	uter. This information is used for log entries and firewall settings.
Time Zone :	(GMT+00:00)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London 💌
Time Server Address :	192.43.244.18
Daylight Savings :	Enable Time From January V 1 V To January V 1 V
	NEXT

## Control Control

STEP6: Click "Quick Setup" to configure

## STEP 8: Click "3G/3.5G" to configure 3G mobile Internet. (Please refer to the manual in CD-ROM for other methods)

<ul> <li>3G/3.5G</li> <li>If you connect to internet using an 3G/3.5G handset or 3G/3.5G USB modern, then you should choose this option and enter the required information.</li> </ul>
<ul> <li><u>Cable Modem</u> A connection through a cable modem requires minimal configuration. When you set up an account with your Cable provider, the Cable provider and your Vinless Roater will automatically establish a connection, so you probably do not need to enter anything more.</li> </ul>
<ul> <li>Fixed-IP xDSL Some XGSL Interned Service Providers may assign a Fixed IP Address for your Wireless Router. If you have been provided with this information, choices this option and returt the assigned IP Address, Sobreck Maak, Gateway IP Address and DHS IP Address for your Wretess Router.</li> </ul>
<ul> <li><u>PPPOE xDSL</u> If you connect to the Internet using an xDSL Modern and your ISP has provided you with a Password and a Service Name, then your ISP uses PPPE to establish a connection. You must choose this option and enter the required information.</li> </ul>
<ul> <li><u>PPTP xDSL</u></li> <li>If you connect to the intermet using an xDSL Modern and your ISP has provided you with a Password, Local IP Address. Remote IP Address and a connection is a connection to the your ISP uses PPTP to establish a connection. You must choose this option and enter the required information.</li> </ul>
O L2TP XDSL Layer Two Tunneling Protocol is a common connection method used in xDSL connections.
• Telstra Big Pond If your Internet service is provided by Telstra Big Pond in Australia, you will need to enter your information below. This information is provided by Telstra Big <sup>Pond</sup>
ВАСК



## Quick Guide

 PLANET Technology Corporation

 11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.

 Tel: 886-2-2219-9518
 Fax: 886-2-2219-9528

 Email: support@planet.com.tw
 www.planet.com.tw

FCCCCCD ( PLANET reserves the right to change specifications without prior notice. All brand names and trademarks are property of their respective owners. Copyright © 2010 PLANET Technology Corp. All rights reserved.