

Quick Installation Guide

WPG-210N

802.11n Wireless Presentation Gateway

1. Package Contents


Thank you for choosing PLANET WPG-210N. Before installing the device, please verify the contents inside the package box.

WPG-210N	Quick Guide	CD-ROM
Antenna x 2	Power Adapter & World-Wide Adapter Set	Wall-mount Kit

Note If there is any item missed or damaged, please contact the seller immediately.

3. Hardware Installation

Step 1: Please turn on your projector first, and connect HDMI or D-sub cable of the projector to WPG-210N. Now you can power on WPG-210N.

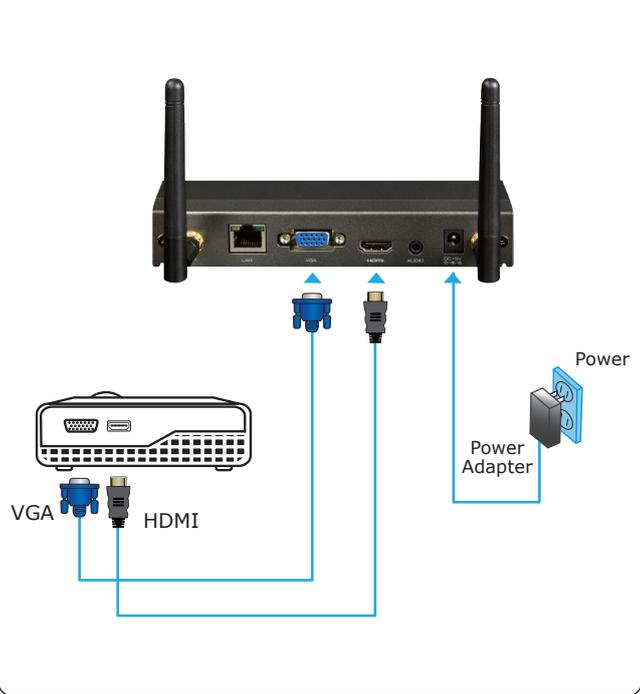

2. Physical Introduction

Front Panel Description


Rear Panel Description

Step 2: When the projector shows the default screen as below, it indicates WPG-210N is ready now.



4. Software Installation – Windows

Step 1: Site survey the wireless signal of WPG-210N, and connect your PC with it wirelessly.

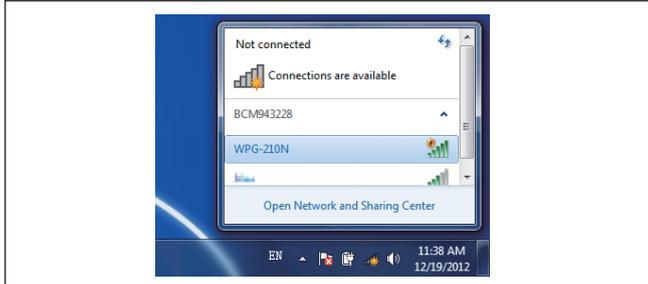

* The connection information (SSID) can be found from the projector screen.

Default SSID: **WPG-210N** Default IP Address: **192.168.1.1**
 Default Username: **admin** Default Password: **admin**

Step 2: Open the web browser and it will redirect to WPG-210N home page automatically, or you can enter the default IP address **192.168.1.1** to access it.



Step 3: Download the client utility (WPG) of Windows 7/Vista/XP and execute it. After installing the program, you'll see WPG shortcut on your PC desktop.




Step 6: Click the  button to start projection, or choose one of the numbers (1-4) to project to the split screen.



5. Software Installation – Mac OS X


Step 1: Enable your WiFi and connect to WPG-210N.

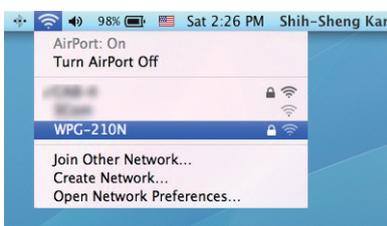

Step 2: Open the web browser and enter the default IP address **192.168.1.1** to access the WPG-210N home page.
 Download the client utility (WPG) of Mac OS X and execute it.



Step 4: Click WPG icon  on the desktop to execute the program. The WPG will start to search the available access points automatically if you have not connected your PC to WPG-210N manually.

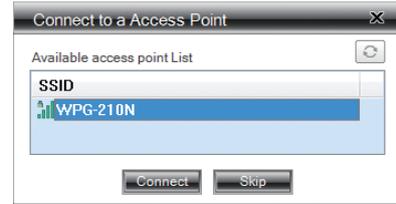


Note Please make sure the firewall in Windows will allow the WPG software to pass through.

Step 5: When the default SSID "WPG-210N" is displayed in the list, please click it to connect and then enter the Login Code shown on the projector screen.



Step 3: Launch WPG software and enter the login code.

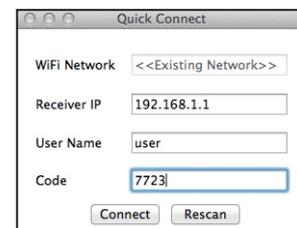

Further Information

The above steps introduce simple installations and configurations for WPG-210N. For further configurations of the utility (WPG), Virtual Extended Screen, and Wi-Fi AP-Client etc, please refer to the user's manual in the CD. If you have further questions, please contact the local dealer or distributor where you purchased this product.