

## Quick Installation Guide

VC-230N

300Mbps 802.11n Wireless VDSL2 Router



## 1. Package Contents

Thank you for choosing PLANET VC-230N. Before installing the AP, please verify the contents inside the package box.

VDSL2 Router



Quick Guide



CD-ROM



Ethernet Cable



Phone Cable



Power Adapter



If there is any item missing or damaged, please contact the seller immediately.

- 1 -

## 2. Physical Introduction

Front Panel of VC-230N



Rear Panel of VC-230N



- 2 -


## 3. Hardware Installation

**STEP 1:** Locate the VC-230N in an optimum place, and adjust the antenna for the best coverage.



- 3 -

**STEP 2:** Follow the figure below to connect the network devices.

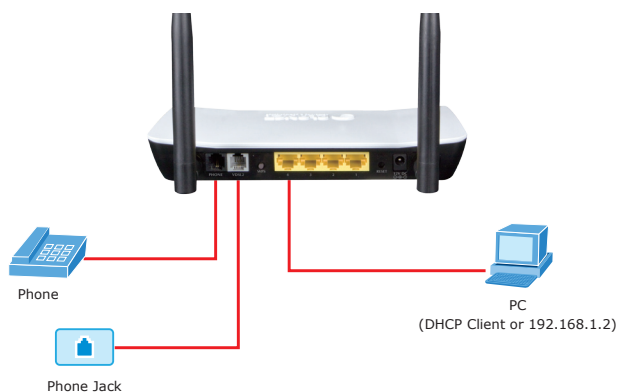


**STEP 3:** Connect the Power Adapter to VC-230N. Check whether the PWR LED and LAN LED on the front panel are on accordingly.




- 4 -

## Application

### VDSL2 Point-to-Point

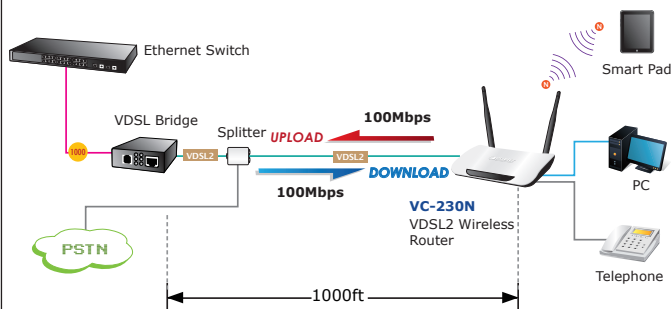

### VDSL2 Point-to-Multipoint

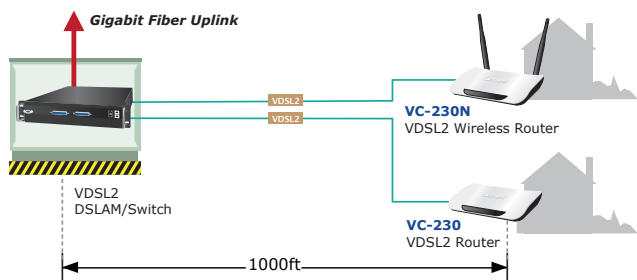


- 5 -

## 4. Web Login


Connect the VC-230N with your PC with an Ethernet cable plugging in LAN port. Power on the VC-230N using the power adapter.

**STEP 1:** Assign a static IP address to your PC which should be in the same network segment with the VC-230N. As the default IP address of the VC-230N is 192.168.1.1, you may choose from 192.168.1.2 to 192.168.1.254. Then click **OK**.

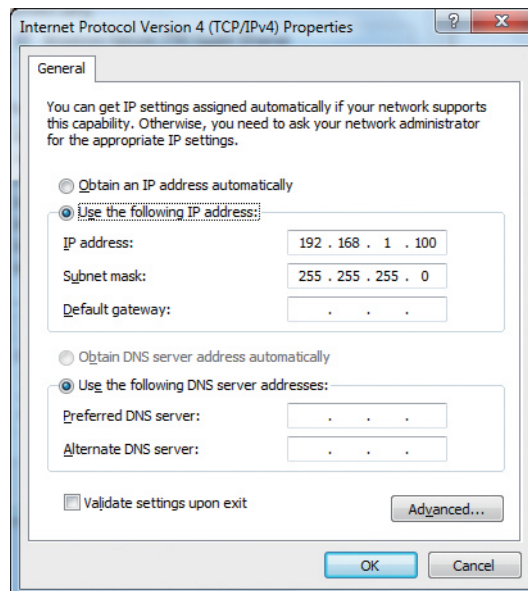


- 6 -

 
**STEP 2:** Open the web browser on your PC, key in the IP address (**192.168.1.1**) of the VC-230N in the address bar, and then enter.



**STEP 3:** Enter the default User Name and Password "**admin**", and then click **OK**.

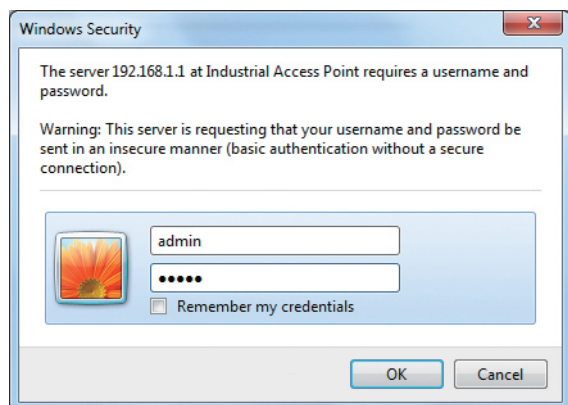

**STEP 4:** Now, you can see the Web management UI of the VC-230N.

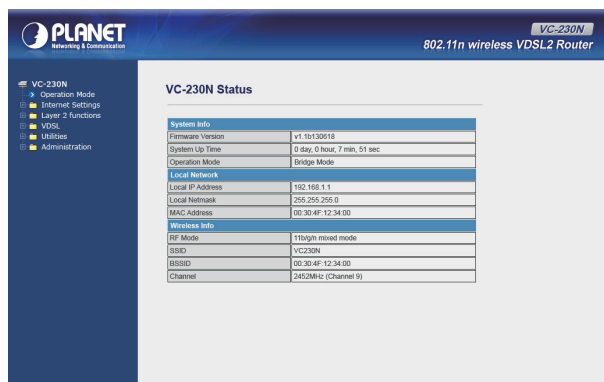

## Further Information

The above steps introduce simple installations and configurations for the VC-230N. For further configurations of different operation modes, please refer to the user's manual in the CD. If you have further questions, please contact the local dealer or distributor where you purchased this product.

Default IP Address: **192.168.1.1**

Default User Name: **admin**

Default Password: **admin**

Default SSID: **VC230N**

- 7 -

2010-AC0220-000

- 8 -