Internet Telephony PBX System (30/100/500 SIP Users Registrations)

IPX-330 / IPX-2100 / IPX-2500

Quick Installation Guide

Table of Contents

1.1. Package Contents 1.2. Hardware Installation 1.2.1 Safety Instructions 1.2.2 Physical Introduction 1.2.3 LED & Button definitions 1.2.4 Placement 1.2.5 Physical Connection 1.3.1 Web Login 1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten a 2. IPX-2100 2.1 Package Contents 2.2.1 Safety Instructions 2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3.1 Web Login 2.3.2 Configuring the Network Setting 3.3 Changing IP Address or forgotten a 3. IPX-2500 3.1 Package Contents 3.2.1 Safety Instructions 3.2.2 Physical Introduction 2.3.3 Changing IP Address or forgotten a 3. IPX-2500 3.1 Package Contents 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.3 Basic System Configuration 3.2.4 Placement 3.2.5 Physical Connection 3.3 Basic System Configuration 3.3.1 Web Login	3
1.2.1 Safety Instructions 1.2.2 Physical Introduction 1.2.3 LED & Button definitions 1.2.4 Placement 1.2.5 Physical Connection 1.3.1 Basic System Configuration 1.3.1 Web Login 1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten a 2. IPX-2100 2.1 Package Contents 2.2.1 Safety Instructions 2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten a 3. IPX-2500 3.1 Package Contents 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Introduction 3.2.6 Batton definitions 3.2.7 Physical Introduction 3.2.8 Button definitions 3.2.9 Physical Introduction 3.2.9 Physical Connection 3.2.1 Safety Instructions 3.2.2 Physical Connection 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection	3
1.2.2 Physical Introduction 1.2.3 LED & Button definitions 1.2.4 Placement 1.2.5 Physical Connection 1.3. Basic System Configuration 1.3.1 Web Login 1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten at 2. IPX-2100 2.1 Package Contents 2.2.1 Safety Instructions 2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3. Basic System Configuration 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten at 3. IPX-2500 3.1 Package Contents 3.2. Hardware Installation 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Introduction 3.2.6 Physical Connection 3.2.7 Physical Connection 3.2.8 Physical Connection 3.2.9 Physical Connection 3.2.9 Physical Connection 3.2.1 Safety Instructions 3.2.2 Physical Connection	3
1.2.3 LED & Button definitions 1.2.4 Placement 1.2.5 Physical Connection 1.3. Basic System Configuration 1.3.1 Web Login 1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten a 2. IPX-2100 2.1 Package Contents 2.2.1 Hardware Installation 2.2.1 Safety Instructions 2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3.1 Web Login 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten a 3. IPX-2500 3.1 Package Contents 3.2. Hardware Installation 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.2.6 Physical Connection 3.2.7 Physical Connection 3.2.8 Basic System Configuration	3
1.2.4 Placement	4
1.2.5 Physical Connection 1.3. Basic System Configuration 1.3.1 Web Login 1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten at the set of the set	4
1.3. Basic System Configuration 1.3.1 Web Login 1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten a 2. IPX-2100 2.1. Package Contents 2.2. Hardware Installation 2.2.1 Safety Instructions 2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten a 3. IPX-2500 3.1. Package Contents 3.2. Hardware Installation 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.2.6 Physical Connection 3.2.7 Physical Connection 3.2.8 Basic System Configuration	5
1.3.1 Web Login 1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten at the set of t	5
1.3.2 Configuring the Network Setting 1.3.3 Changing IP Address or forgotten a 2. IPX-2100 2.1. Package Contents	6
1.3.3 Changing IP Address or forgotten a 2. IPX-2100	
2. IPX-2100	7
2.1. Package Contents 2.2. Hardware Installation 2.2.1 Safety Instructions 2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten at the set of the s	ıdmin password8
2.2. Hardware Installation	9
2.2.1 Safety Instructions 2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3. Basic System Configuration 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten at IPX-2500 3.1 Package Contents 3.2. Hardware Installation 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.3 Basic System Configuration	9
2.2.2 Physical Introduction 2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten a 3. IPX-2500 3.1 Package Contents 3.2. Hardware Installation 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.3 Basic System Configuration	9
2.2.3 LED & Button definitions 2.2.4 Placement 2.2.5 Physical Connection 2.3. Basic System Configuration 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten at IPX-2500 3.1 Package Contents 3.2. Hardware Installation 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.3 Basic System Configuration	9
2.2.4 Placement	10
2.2.5 Physical Connection	10
2.3. Basic System Configuration 2.3.1 Web Login 2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten a 3. IPX-2500 3.1. Package Contents 3.2. Hardware Installation 3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.3 Basic System Configuration	11
2.3.1 Web Login	11
2.3.2 Configuring the Network Setting 2.3.3 Changing IP Address or forgotten a 3. IPX-2500	
2.3.3 Changing IP Address or forgotten a 3. IPX-2500	
3. IPX-2500	
3.1. Package Contents	
3.2. Hardware Installation	15
3.2.1 Safety Instructions 3.2.2 Physical Introduction 3.2.3 LED & Button definitions 3.2.4 Placement 3.2.5 Physical Connection 3.3 Basic System Configuration	
3.2.2 Physical Introduction	
3.2.3 LED & Button definitions	
3.2.4 Placement	
3.2.5 Physical Connection	
3.3 Basic System Configuration	
,	17
3.3.1 Web Login	17
-	17
3.3.2 Configuring the Network Setting	18
4. Further Configuration	20

1. IPX-330

1.1. Package Contents

Thank you for purchasing PLANET Internet Telephony PBX system, IPX-330. This Quick Installation Guide will introduce how to finish the basic setting of connecting the web management interface and the Internet. Open the box of the Internet Telephony PBX system and carefully unpack it. The box should contain the following items:

- IPX-330 x 1
- Ouick Installation Guide x 1
- User's Manual CD x 1
- Power Adapter x 1 (12V DC)
- RJ-45 x 1

If any of the above items are damaged or missing, please contact your dealer immediately.

1.2. Hardware Installation

The following are instructions for setting up PLANET IPX-330. Refer to the illustration and follow the simple steps below to quickly install your Internet Telephony PBX system.

1.2.1 Safety Instructions

The following are the safety instructions for Internet Telephony PBX system before installing.

- The maximum operating temperature of the IPX-330 is -10~45°C, which allows sufficient air circulation.
- The connections and equipment that supply power to the IPX-330 should be capable of operating safely with the maximum power requirements of the IPX-330. In the event of a power overload, the supply circuits and supply wiring should become hazardous.
- The power adapter must plug into the right supply voltage. Make sure that the supplied power voltage is correct and stable. If the input power voltage is over 10% lower than the standard, it may cause the IPX-330 to malfunction.
- Generally, when installed after the final configuration, the product must comply with the applicable safety standards and regulatory requirements of the country in which it is installed. If necessary, consult for technical support.

1.2.2 Physical Introduction



Front Panel of the IPX-330



Rear Panel of the IPX-330

1.2.3 LED & Button definitions

LED definitions

Front Panel LED	Status	Description
PWR	Steady Green Off	PBX Power ON PBX Power OFF
SYS	Blinking Green Off	System is working System is off
ETH	Blinking Green Off	PBX network connection is established Waiting for network connection
FXO	Steady Red Flashing Off	Ready / Standby Ringing System is off

Button	Action	Description
Docet	Press less than 5 secs.	System reboot
Reset	Press over 6 secs.	Reset to Factory Default


- 4

1.2.4 Placement

Make sure the device is placed in a safe environment to avoid equipment failure.

- DO NOT place anything on top of the device. Excessive weight could damage it.
- DO NOT obstruct ventilation slots on each side of the IPX-330 or expose it to direct sunlight or other heat source. Be sure that there is adequate air flow around the IPX-330.
- Place the IPX-330 on a flat surface to avoid any damage.

1.2.5 Physical Connection

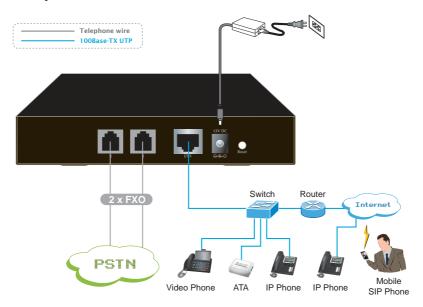

Physical Connection Topology of the IPX-330

1.3. Basic System Configuration

1.3.1 Web Login

- **Step 1.** Connect a computer to an ETH port on the IPX-330. Your PC must set up to the same domain as 192.168.0.X of the IPX-330.
- **Step 2**. Start a web browser. To use the user interface, you need a PC with Internet Explorer (version 6 and higher), Firefox, or Safari (for Mac).
- Step 3. Enter the default IP address of the IPX-330: 192.168.0.1 into the URL address box.
- **Step 4.** Enter the default user name **admin** and the default password **admin**, and then click Login to enter Web-based user interface.

(Default IP)

Default ETH IP: **192.168.0.1**Default User Name: **admin**Default Password: **admin**



Login page of the IPX-330




For security reason, please change and memorize the new password after this first setup.

1.3.2 Configuring the Network Setting

Step 1. Go to Network Settings → Network




Network & Country button

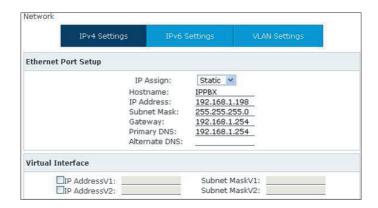

Network Setting page

Step 2. Edit your ETH port IP information .


There are three types of Ethernet port connection. They are **Static IP**, **PPPoE** (Point-to-Point Protocol over Ethernet) and **DHCP**. You can find detailed setting process in the user manual.

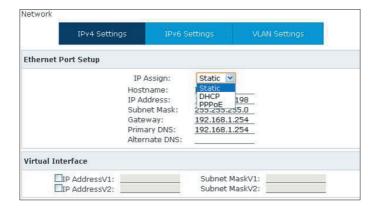

Selection of IP Connection Type

1.3.3 Changing IP Address or forgotten admin password

To reset the IP address to the default IP Address "192.168.0.1" (ETH) or reset the login password to default value, press the reset button on the front panel for **more than 6 seconds**. After the device is rebooted, you can login the management WEB interface within the same subnet of 192.168.0.xx.

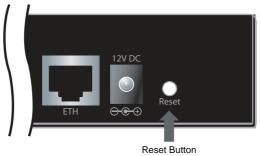



After pressing the "Reset" button, all the system data will be reset to default; if possible, back up the config file before resetting.

- 8 ⊪

2. IPX-2100

2.1. Package Contents

Thank you for purchasing PLANET Internet Telephony PBX system, IPX-2100. This Quick Installation Guide will introduce how to finish the basic setting of connecting the web management interface and the Internet. Open the box of the Internet Telephony PBX system and carefully unpack it. The box should contain the following items:

- IPX-2100 x 1
- Ouick Installation Guide x 1
- User's Manual CD x 1
- Power Adapter x 1 (12V)
- RJ-45 x 1
- Bracket x 2

If any of above items are damaged or missing, please contact your dealer immediately.

2.2. Hardware Installation

The following are instructions for setting up PLANET IPX-2100. Refer to the illustration and follow the simple steps below to quickly install your Internet Telephony PBX system.

2.2.1 Safety Instructions

The following are the safety instructions for Internet Telephony PBX system before installing.

- The maximum operating temperature of the IPX-2100 is -10~45°C. Care must be taken to allow sufficient air circulation.
- The connections and equipment that supply power to the IPX-2100 should be capable of operating safely with the maximum power requirements of the IPX-2100. In the event of a power overload, the supply circuits and supply wiring should become hazardous.
- The power adapter must plug into the right supply voltage. Make sure that the supplied power voltage is correct and stable. If the input power voltage is over 10% lower than the standard, it may cause the IPX-2100 to malfunction.
- Generally, when installed after the final configuration, the product must comply with the applicable safety standards and regulatory requirements of the country in which it is installed. If necessary, consult for technical support.

2.2.2 Physical Introduction



Front Panel of the IPX-2100



Rear Panel of the IPX-2100



Supporting 2 slots, user can buy expansion module like VIP-21FO (4 x FXO), VIP-21SL (2 x FXO + 2 x FXS) or VIP-21GS (4 x GSM) for extending port service.

2.2.3 LED & Button definitions

LED definitions

Front Panel LED	Status	Description
PWR	Steady Green Off	PBX Power ON PBX Power OFF
SYS	Blinking Green Off	System is working System is off
ETH	Blinking Green Off	PBX network connection is established Waiting for network connection
FXO	Steady Red Flashing Off	Ready / Standby Ringing Module not available
FXS	Steady Green Flashing Off	Ready / Standby Ringing Module not available
USB	Void	Future Feature


Button	Action	Description
Reset	Press less than 5 secs.	System reboot
	Press over 6 secs.	Reset to Factory Default

2.2.4 Placement

Make sure the device is placed in a safe environment to avoid equipment failure.

- DO NOT place anything on top of the device. Excessive weight could damage it.
- DO NOT obstruct ventilation slots on each side of the IPX-2100 or expose it to direct sunlight or other heat source. Be sure that there is adequate air flow around the IPX-2100.
- Place the IPX-2100 on a flat surface to avoid any damage.

2.2.5 Physical Connection

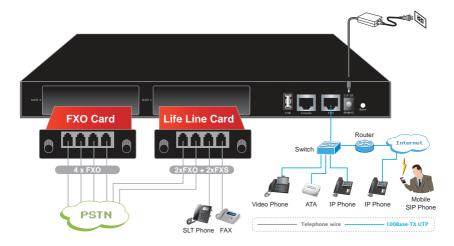

Physical Connection Topology of the IPX-2100

2.3. Basic System Configuration

2.3.1 Web Login

- **Step 1.** Connect a computer to an ETH port on the IPX-2100. Your PC must set up to the same domain as 192.168.0.X as the IPX-2100.
- **Step 2**. Start a web browser. To use the user interface, you need a PC with Internet Explorer (version 6 and higher), Firefox, or Safari (for Mac).
- Step 3. Enter the default IP address of the IPX-2100: 192.168.0.1 into the URL address box.
- **Step 4.** Enter the default user name **admin** and the default password **admin**, then click Login to enter Web-based user interface.

(Default IP)

Default ETH IP: 192.168.0.1
Default User Name: admin
Default Password: admin



Login page of the IPX-2100




For security reason, please change and memorize the new password after this first setup.

2.3.2 Configuring the Network Setting

Step 1. Go to Network Settings → Network




Network & Country button

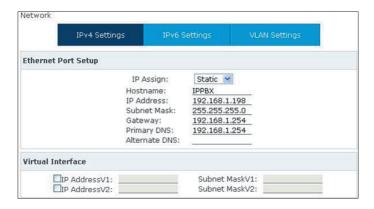

Network Setting page

Step 2. Edit your ETH port IP information.


There are three types of Ethernet port connection. They are **Static IP**, **PPPoE** (Point-to-Point Protocol over Ethernet), **DHCP**. You can find detailed setting process in the user manual.

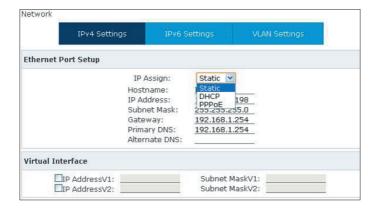

Selection of IP Connection Type

2.3.3 Changing IP Address or forgotten admin password

To reset the IP address to the default IP Address "192.168.0.1" (ETH) or reset the login password to default value. Press the reset button on the front panel for **more than 6 seconds.** After the device is rebooted, you can login the management WEB interface within the same subnet of 192.168.0.xx.

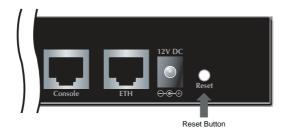



After pressing the "Reset" button, all the system data will be reset to default; if possible, back up the config file before resetting.

3. IPX-2500

3.1. Package Contents

Thank you for purchasing PLANET Internet Telephony PBX system, IPX-2500. This Quick Installation Guide will introduce how to finish the basic setting of connecting the web management interface and the Internet. Open the box of the Internet Telephony PBX system and carefully unpack it. The box should contain the following items:

- IPX-2500 x 1
- Ouick Installation Guide x 1
- User's Manual CD x 1
- Power Cord x 1 (12V)
- RJ-45 x 1
- Bracket x 2

If any of above items are damaged or missing, please contact your dealer immediately.

3.2. Hardware Installation

The following are instructions for setting up PLANET IPX-2500. Refer to the illustration and follow the simple steps below to quickly install your Internet Telephony PBX system.

3.2.1 Safety Instructions

The following are the safety instructions for Internet Telephony PBX system before installing.

- The maximum operating temperature of the IPX-2500 is -10~45°C. Care must be taken to allow sufficient air circulation.
- The connections and equipment that supply power to the IPX-2500 should be capable of operating safely with the maximum power requirements of the IPX-2500. In the event of a power overload, the supply circuits and supply wiring should become hazardous.
- The power adapter must plug into the right supply voltage. Make sure that the supplied power voltage is correct and stable. If the input power voltage is over 10% lower than the standard, it may cause the IPX-2500 to malfunction.
- Generally, when installed after the final configuration, the product must comply with the applicable safety standards and regulatory requirements of the country in which it is installed. If necessary, consult for technical support.

3.2.2 Physical Introduction



Front Panel of the IPX-2500



Rear Panel of the IPX-2500



Supporting 2 slots, user can buy expansion module like VIP-21FO (4 x FXO), VIP-21SL (2 x FXO + 2 x FXS) or VIP-21GS (4 x GSM) for extending port service.

3.2.3 LED & Button definitions

LED definitions

Front Panel LED	Status	Description
PWR	Steady Green	PBX Power ON
FVVIX	Off	PBX Power OFF
SYS	Blinking Green	System is working
313	Off	System is off
WAN	Blinking Green	PBX network connection is established
VVAIN	Off	Waiting for network connection
LAN	Blinking Green	Data transfer
LAN	Off	Waiting for network connection
	Steady Red	Ready / Standby
FXO	Flashing	Ringing
	Off	Module not available
	Steady Red	Ready / Standby
GSM	Flashing	Ringing
	Off	Module not available
	Steady Green	Ready / Standby
FXS	Flashing	Ringing
	Off	Module not available
USB	Void	Future Feature
Audio	Void	Future Feature


116 ₪

3.2.4 Placement

Make sure the device is placed in a safe environment to avoid equipment failure.

- DO NOT place anything on top of the device. Excessive weight could damage it.
- DO NOT obstruct ventilation slots on each side of the IPX-2500 or expose it to direct sunlight or other heat sources. Be sure that there is adequate air flow around the IPX-2500.
- Place the IPX-2500 on a flat surface to avoid any damage.

3.2.5 Physical Connection

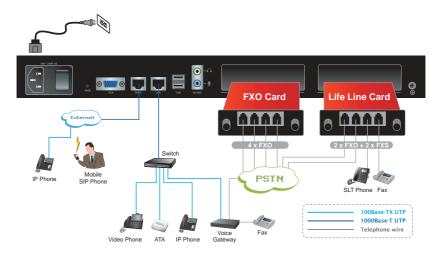

Physical Connection Topology of the IPX-2500

3.3 Basic System Configuration

3.3.1 Web Login

- **Step 1.** Connect a computer to a LAN port on the IPX-2500. Your PC must set up to the same domain as 192.168.0.X as the IPX-2500.
- **Step 2.** Start a web browser. To use the user interface, you need a PC with Internet Explorer (version 6 and higher), Firefox, or Safari (for Mac).
- Step 3. Enter the default IP address of the IPX-2500: 192.168.0.1 into the URL address box.
- Step 4. Enter the default user name admin and the default password admin, and then click Login to enter Web-based user interface.

(Default IP)

Default WAN IP: 172.16.0.1
Default LAN IP: 192.168.0.1
Default User Name: admin
Default Password: admin



Login page of the IPX-2500




For security reason, please change and memorize the new password after this first setup.

3.3.2 Configuring the Network Setting

Step 1. Go to Network Settings → Network




Network & Country button

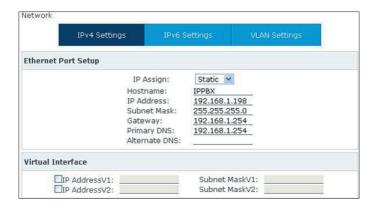

Network setting page

Step 2. Edit your WAN port IP information.

There are three types of Ethernet port connection. They are **Static IP**, **PPPoE** (Point-to-Point Protocol over Ethernet), **DHCP**. You can find detailed setting process in the user manual.

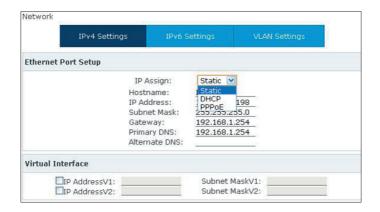

Selection of IP Connection Type

4. Further Configuration

Thank you for purchasing PLANET products. The above steps introduce the simple configuration of the IPX-330 / IPX-2100 / IPX-2500. For further configuration, please refer to the user's manual on the CD. If you have other questions, please contact the **local dealer** or **distributor** where you purchased this product.

You also can browse our online FAQ resource at the PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET support team.

PLANET online FAQ:

http://www.planet.com.tw/en/support/fag.php

Support team mail address:

support_voip@planet.com.tw

Copyright © PLANET Technology Corp. 2014.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.