


Quick Installation Guide

WNAP-6308

802.11n Wireless Outdoor Access Point



1. Package Contents

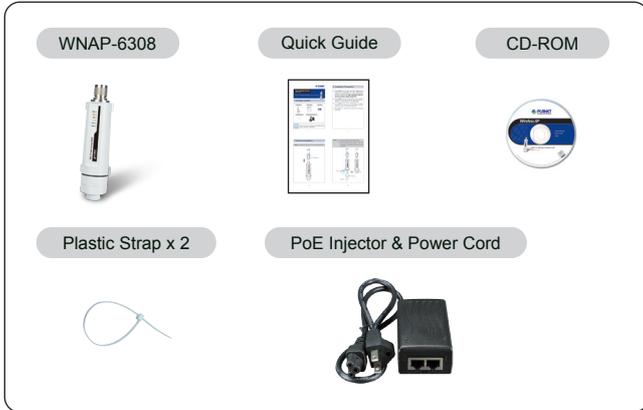


If there is any item missing or damaged, please contact the seller immediately.

2. Installation Precautions


1. Users **MUST** use a proper and well-installed surge arrester and grounding kit with WNAP-6308; otherwise, a random lightning could easily cause fatal damage to WNAP-6308. **EMD (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.**
2. Users **MUST** use the "Power Cord & PoE Injector" shipped in the box with the WNAP-6308. Use of other options will cause damage to the WNAP-6308.
3. Users **MUST** power off the WNAP-6308 first before connecting the antenna to it; otherwise, damage might be caused to the WNAP-6308 itself.
4. The Antenna is required, and must be purchased separately.

3. Hardware Installation

STEP 1: Connect the Antenna to the top of WNAP-6308.

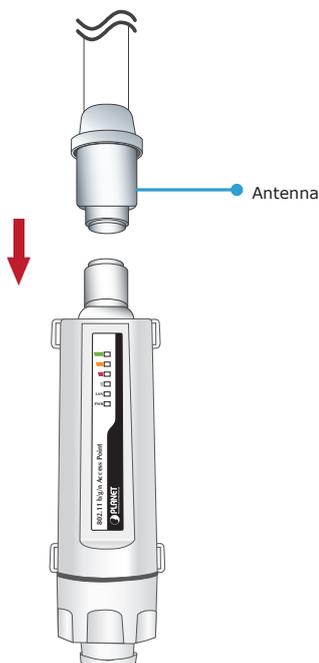

STEP 2: (1) Open the bottom of the WNAP-6308.
 (2) Plug the RJ-45 Ethernet cable into the LAN Port through the Cap and Gasket. Then seal the bottom of the WNAP-6308 with the Cap and Gasket.

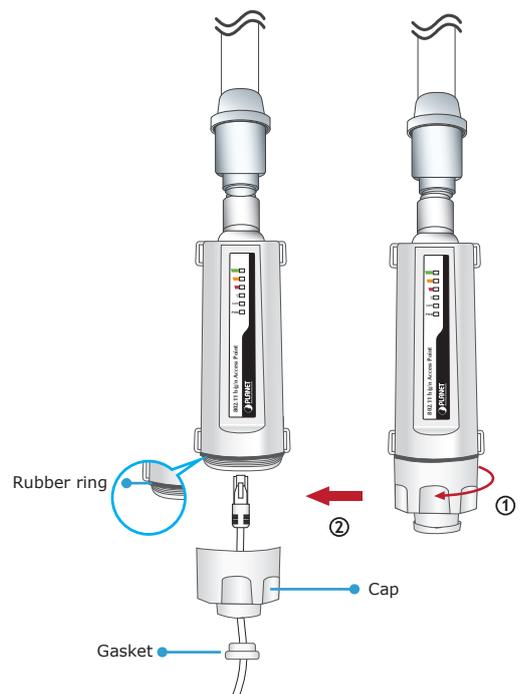




1. Ensure to pack the Gasket into the Cap tightly to avoid the penetration of water.
2. Do not remove or lose the Rubber ring that fits over the spiral groove on the bottom of the WNAP-6308; otherwise, the product may be damaged by the penetration of water.


STEP 3: Take out the power cord and PoE injector, plug the power cord into the DC port and plug the other side of the RJ-45 cable in the STEP 2 into the POE port of the PoE injector.

WNAP-6308

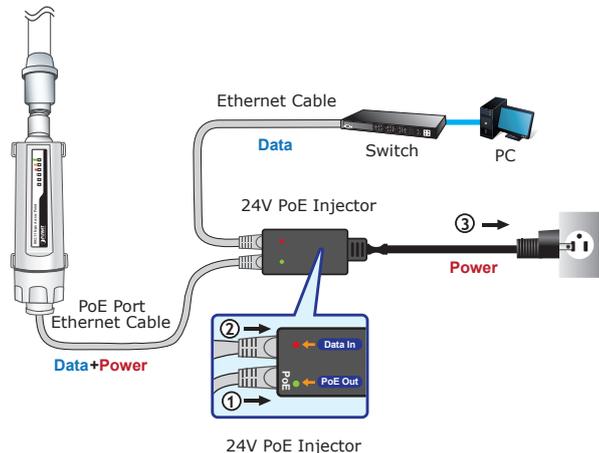

4. Pole Mounting

STEP 1: Place the straps through the slots on the sides of the WNAP-6308 and then around the pole. Tighten the straps to secure your WNAP-6308.

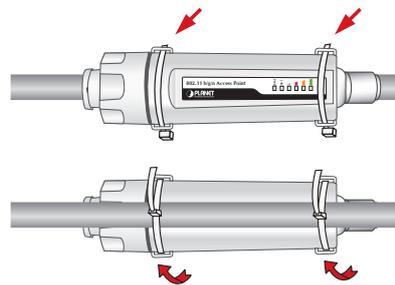

IMPORTANT SAFETY PRECAUTIONS:

1. **LIVES MAY BE AT RISK!** Please be aware of the electric wires around, and tighten the pole. Carefully read the section "**OUTDOOR INSTALLATION WARNING**" in the manual before installation.
2. Users **MUST** use the "**Power Cord & PoE Injector**" shipped in the box with the WNAP-6308. Otherwise, the product might be damaged.

5. Web Login

A computer with wired Ethernet connection to the WNAP-6308 is required for the first-time configuration.


1. Assign a static IP address to your PC which should be in the same network segment with the WNAP-6308. As the default IP address of the WNAP-6308 is 192.168.1.1, you may choose from 192.168.1.2 to 192.168.1.254. Then click **OK**.
2. Open the web browser on your PC, key in the IP address (**192.168.1.1**) of the WNAP-6308 in the address bar, and then enter.
3. The default User Name and Password are both "**admin**". Enter them and then click **OK**.



Default IP Address: **192.168.1.1**
 Default User Name: **admin**
 Default Password: **admin**
 Default SSID: **WNAP-6308**

4. Now, you can see the Web management UI of the WNAP-6308.

You can use **Easy Setup** at the top of the screen to configure the WNAP-6308.

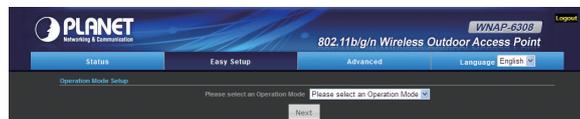

FURTHER INFORMATION

The above steps introduce simple installations and configurations for the WNAP-6308. For further configurations of different operation modes, please refer to the user's manual in the CD. If you have further questions, please contact the local dealer or distributor where you purchased this product.