

FAQ_How to remote view HDVR-1600 by Android Phone

HDVR-1600



*** FW & Utility version List:

HDVR-1600: v0574-0369-0613-5986

Android Phone: 2.1 OS

Java J2ME Runner: 2.0.3.1

DVRMobileView: 3.6.6

Install Java J2ME Runner and DVRMobileView :

Step1. Decompress the **Android.zip**, you will see the two files “**Java J2ME Runner 2.0.3.1.apk**” and “**DVRMobileView 3.6.6.apk**”.

Step2. Install “**Java J2ME Runner 2.0.3.1.apk**” and “**DVRMobileView 3.6.6.apk**” to your Andorid Phone.




Setup the HDVR-1600 on DVRMobileView software :

Step1. Open the DVRMobileView software.




Step2. Select the “Connect to device...”.

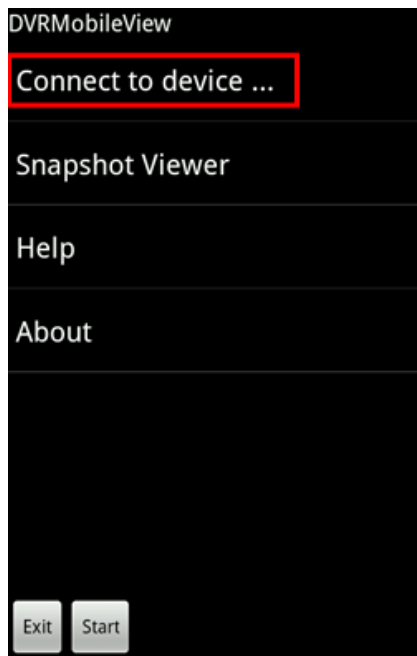

Step3. Press the “**New**” button to add the New Device.



Step4. Key in the “**Bookmark Name**” and select “**DVR**”.

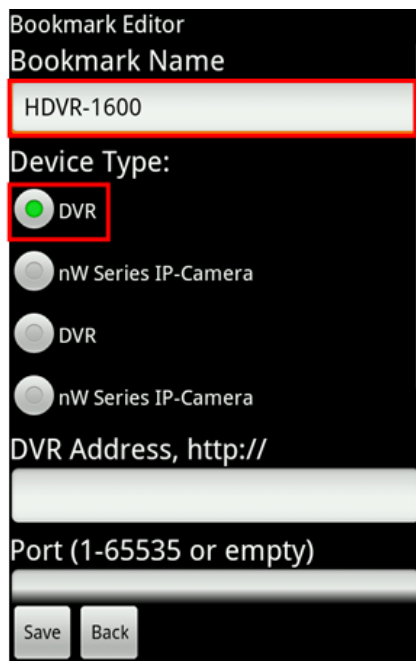

PLANET Technology Corporation

11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.

Tel: 886-2-2219-9518 Fax: 886-2-2219-9528

Email: support@planet.com.tw

Web site: <http://www.planet.com.tw>

*Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved*

Step5.

- (1) Key in your HDVR-1600 “**IP-Address**”.
- (2) Set the Port to “**80**” (default)
- (3) Set the Username “**admin**” (default)
- (4) Set the Password “**1234**” (default)
- (5) Press “**Save**” button to save setting.

Bookmark Editor
nW Series IP-Camera

DVR Address, http://

1. 210.66.155.89

Port (1-65535 or empty)

2. 80

User Name

3. admin


Password

4.


Note
The user name and password are case sensitive.

5. Save Back


Step6. After setting complete, you will see the your device name on the “**Bookmark List**”, then select the your device.

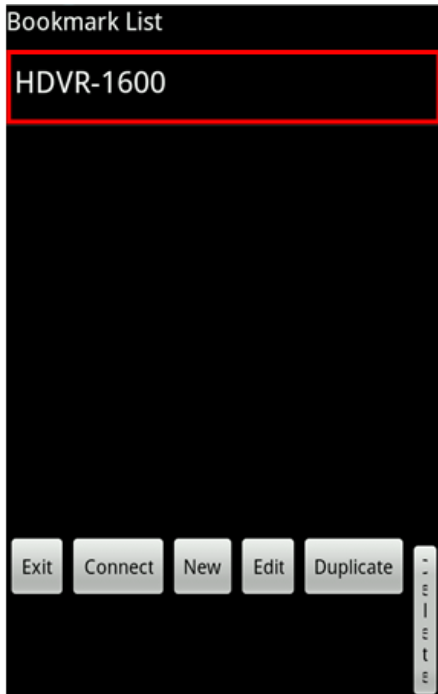

Step7. Select the “**Live Monitoring**”.

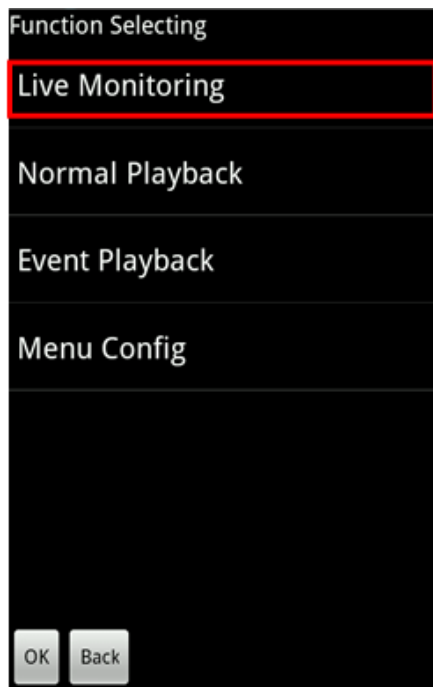

Step8. Select the “**Channel**” you wan to view.

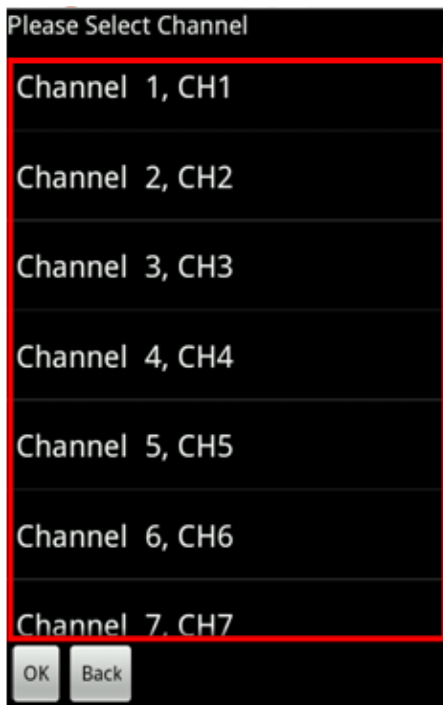

Step9. Then you will see the IP-Camera screen show on your Android phone.

