

XGS-PWR350-Series 350-watt AC/DC Power Supply

For XGS-6350-48X2Q4C Switch User's Manual

- 1 -

2. Introduction

Before installation, please be sure to read this user's manual carefully to successfully complete the correct installation of the XGS-PWR350-AC/XGS-PWR350-DC 350-watt Power Supply Unit. This manual shows how to quickly install the power supply unit in the XGS-6350-48X2Q4C Switch.

The following figure shows the front panel of the XGS-PWR350 power supply.



Figure 2-1 XGS-PWR350-AC Front View



Figure 2-2 XGS-PWR350-DC Front View

- 3 -

1. Overview

Thank you for purchasing PLANET 350-watt AC/DC power supply.

Power Supply Unit	Input Range
XGS-PWR350-AC	100 to 240V AC
XGS-PWR350-DC	36V to 72V DC

Open the box of the Redundant Power Supply unit and carefully unpack it. The box should contain the following items:

- The AC/DC Power Supply unit x 1
- User's Manual x 1

If any item is found missing or damaged, please contact your local reseller for replacement.



The XGS-PWR350-AC/XGS-PWR350-DC is for XGS-6350-48X2Q4C Switch hardware version 2 only.

- 2 -

3. Installing Redundant Power Supply Unit



The XGS-PWR350-AC/XGS-PWR350-DC is hot-swappable, so there is no need to power off the switch before removing the redundant power supply unit from the switch.

The following installation uses XGS-PWR350-AC as an example.

Follow these steps to install the redundant power supply unit in the switch:

1. Place the switch on a flat surface. Use a screwdriver to unscrew screws on both sides of the blank plate to remove the blank plate. Do not discard the blank plate as it can be used again when removing the power supply unit from the switch.

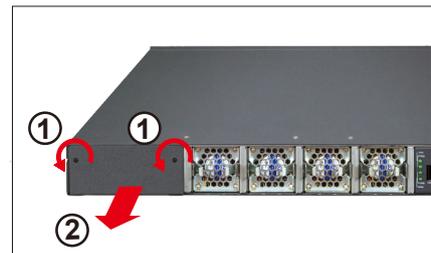


Figure 3-1 Removing the Blank Plate

- 4 -

www.PLANET.com.tw

350-watt AC/DC Power Supply for XGS-6350-48X2Q4C

▶ XGS-PWR350-AC/DC



PLANET Technology Corp.

10F., No. 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan

Warning:
This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

2351-A98330-000



2. Install the redundant power supply unit by sliding it into the compartment.



Figure 3-2 Sliding the Power Supply Unit into the Compartment

3. Next, tighten the thumbscrews clockwise on both sides.



Figure 3-3 Tightening the Thumbscrews

4. Removing Redundant Power Supply Unit

Follow these steps to remove the redundant power supply unit from the switch:

1. Remove AC power cord from the XGS-PWR350-AC.
2. To remove the redundant power supply unit from the XGS-6350-48X2Q4C, loosen the thumbscrews counterclockwise on both sides and use the handle to pull it out.

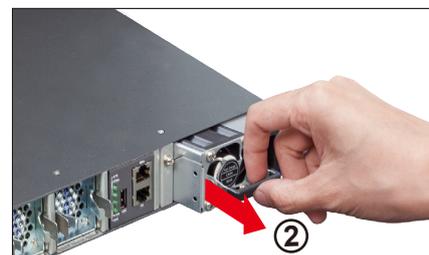
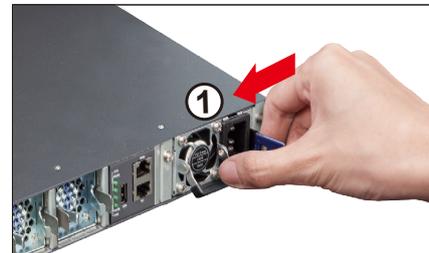


Figure 4-1 Removing the Power Supply Unit