

**8-Port 10/100TX 802.3at PoE +  
2-Port 10/100TX Desktop Switch**

**FSD-1008HP**

User's Manual

## **Copyright**

Copyright © 2022 by PLANET Technology Corp. All rights reserved. No part of this publication may be re-produced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

## **Trademarks**

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.

## **Disclaimer**

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose.

PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred. Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and/or to the products described in this User's Manual, at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

## FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

## Revision

PLANET 8-Port 10/100TX 802.3at PoE + 2-Port 10/100TX Desktop Switch User's Manual

For Model: FSD-1008HP

Revision: 2.0 (May 2022)

Part No.: EM-FSD-1008HP\_v2.0

# Table of Contents

1. Package Contents .....	5
2. Hardware Introduction .....	6
2.1 Front Panel .....	6
2.2 LED Indicators.....	6
2.3 Multiple Functions of DIP Switch .....	7
2.4 Rear Panel .....	9
3. Hardware Installation .....	10
3.1 Desktop Installation .....	11
3.2 Rack Mounting .....	12
3.3 Wall Mounting Installation .....	13
4. Product Specifications .....	15
5. Troubleshooting .....	17
Appendix A - 10/100Mbps, 10/100BASE-TX .....	18

## 1. Package Contents

Thank you for purchasing 8-Port 10/100TX 802.3at PoE + 2-Port 10/100TX Desktop Switch, FSD-1008HP. **"802.3at PoE+ Switch"** mentioned in this Guide refers to the FSD-1008HP.

Open the box of the 802.3at PoE+ Switch and carefully unpack it. The box should contain the following items:

FSD-1008HP x 1	User's Manual x 1
	
Power Cord x 1	Rubber Feet x 4
	
Rack-mounting Brackets	Screws Package x 8
	

If any of these pieces are missing or damaged, please contact your dealer immediately; if possible, retain the carton including the original packing material, and use them again to repack the product in case there is a need to return it to us for repair.

## 2. Hardware Introduction

### 2.1 Front Panel

The front panel of the 802.3at PoE+ Switch consists of 10 Auto-Sensing 10/100Mbps Ethernet RJ45 ports. The LED indicators are also located on the front panel of the FSD-1008HP.

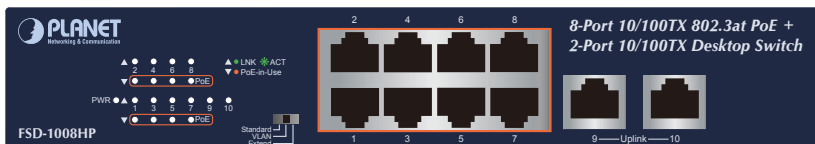


Figure 2-1: FSD-1008HP Switch Front Panel

### 2.2 LED Indicators

#### ■ System




LED	Color	Function
PWR	Green	<b>Lights</b> to indicate that the Switch has power.

#### ■ Per 10/100Mbps Port

LED	Color	Function
PoE-in-Use	Amber	<b>Lights</b> to indicate the port is providing PoE DC in-line power. (1-8 ports)
Speed/ LNK/ACT	Green	<b>Lights</b> to indicate the Switch is successfully connecting to the network at 10/100Mbps. <b>Blinks</b> to indicate that the Switch is actively sending or receiving data over that port.

## 2.3 Multiple Functions of DIP Switch

The front panel of the 802.3at PoE+ Switch provides one DIP switch for **Standard**, **VLAN** or **Extend** mode selection. The detailed descriptions are shown in the following table.


DIP Switch Mode	Function
	<p>This mode makes the FSD-1008HP operate as a <b>general switch</b> and all PoE+ ports operate at 10/100Mbps auto-negotiation.</p>
	<p>This mode makes the FSD-1008HP operate as a <b>VLAN isolation</b> switch and</p> <ol style="list-style-type: none"> <li>1.Port 1 to port 8 will isolate respectively.</li> <li>2.Port 1 to port 8 can only communicate with port 9 and port 10 (uplink ports).</li> </ol>
	<p>This mode makes the FSD-1008HP operate as a <b>Long Reach PoE</b> switch and</p> <ol style="list-style-type: none"> <li>1.Ports 1 to 8 support farthest transmission distance of up to 250 meters</li> <li>2.Ports 1 to 8 have a data rate of 10Mbps</li> <li>3.All ports can communicate with one another.</li> </ol>




Note

Please select a DIP switch mode before powering on the 802.3at PoE+ Switch.


## Default PoE Mode

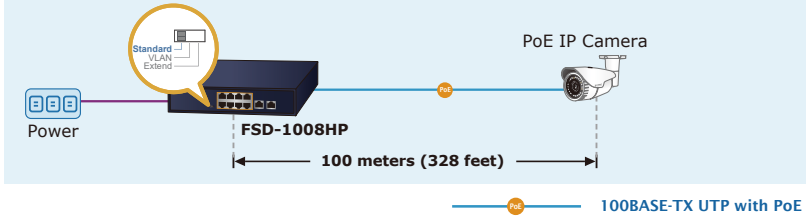

## VLAN Isolation Mode

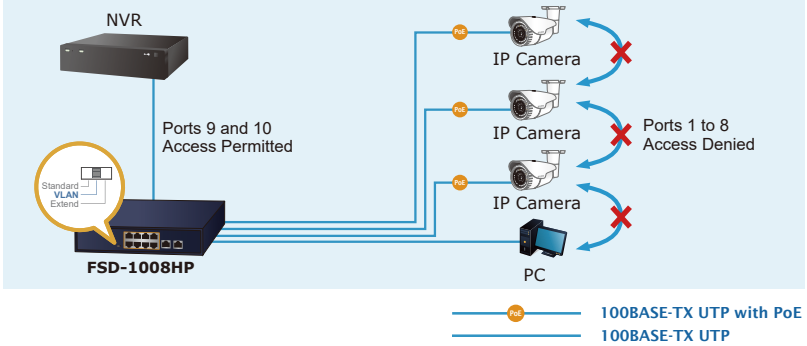

## Extended PoE Mode

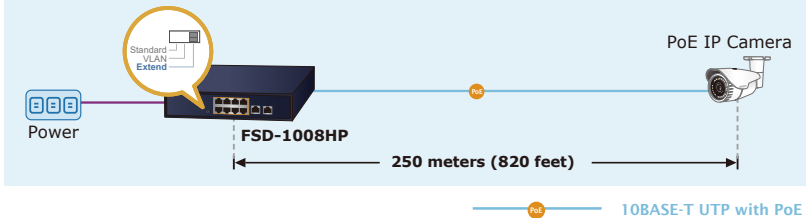



## 2.4 Rear Panel

The rear panel of the 802.3at PoE+ Switch has an AC inlet power socket, which accepts input power of 100 to 240V AC, 50-60Hz, 2.5A max.



**Figure 2-2:** FSD-1008HP Switch Rear Panel

### ■ AC Power Receptacle



#### Power Note

1. The device is a power-required device, which means it will not work till it is powered. If your networks should be active all the time, please consider using UPS (uninterrupted power supply) for your device. It will prevent you from network data loss or network downtime.
2. In some areas, installing a surge suppression device may also help to protect your 802.3at PoE+ Switch from being damaged by unregulated surge or current to the 802.3at PoE+ Switch or the power adapter.

### 3. Hardware Installation

#### Start up

Please refer to the following for your cabling:

##### ■ 10/100BASE-TX

All 10/100BASE-TX ports come with Auto-Negotiation capability. They automatically support 100BASE-TX and 10BASE-T networks. Users only need to plug a working network device into one of the 10/100 BASE-TX ports, and then turn on the FSD-1008HP. The port will automatically run in 10Mbps, 20Mbps, 100Mbps or 200Mbps after the negotiation with the connected device.

##### ■ Cabling

Each of the 10/100BASE-TX ports uses RJ45 sockets -- similar to the phone jacks -- for connection of un-shielded twisted-pair cable (UTP). The IEEE 802.3/802.3u Fast Ethernet standard requires Category 5 UTP for 100Mbps 100BASE-TX. 10BASE-T networks can use Cat.3, 4, 5 or 6 UTP (see table below). Maximum distance is 100 meters (328 feet).


Port Type	Cable Type	Connector
10BASE-T	Cat.3, 4, 5, 2-pair	RJ45
100BASE-TX	Cat.5, 5e UTP, 4-pair	RJ45

Any Ethernet devices like hubs/PCs can be connected to the FSD-1008HP by using straight-through wires. The whole 10/100Mbps ports are auto-MDI/MDI-X that can be used on straight-through or crossover cable.

### 3.1 Desktop Installation

To install the FSD-1008HP on desktop, simply follow the following steps:

**Step 1:** Attach the rubber feet to the recessed areas on the bottom of the FSD-1008HP, as shown in Figure 3-1.

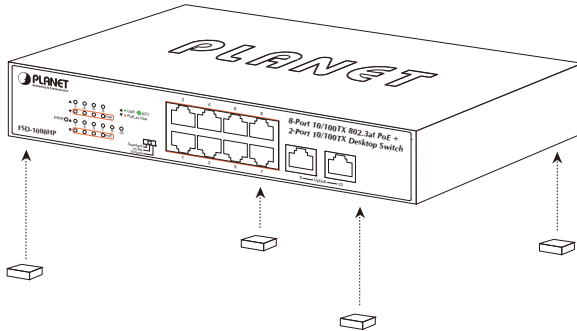

**Figure 3-1:** Attaching the Rubber Feet to the FSD-1008HP

**Step 2:** Place the FSD-1008HP on desktop near an AC power source.

**Step 3:** Keep enough ventilation space between the FSD-1008HP and the surrounding objects.



Note

When choosing a location, please keep in mind the environmental restrictions discussed in Chapter 1, Section 4, under Specifications.

**Step 4:** Connect your FSD-1008HP to 802.3af/at complied power devices (PD) and other network devices.

- A.** Connect one end of a standard network cable to the 10/100BASE-TX RJ45 ports on the front panel of the FSD-1008HP.
- B.** Connect the other end of the cable to the network devices such as printer servers, workstations, routers, etc.



Note

Connection to the Switch requires UTP Category 5, 5e, 6 network cabling with RJ45 tips.

**Step 5:** Supply power to the FSD-1008HP.

**A.** Connect one end of the power cable to the FSD-1008HP.

**B.** Connect the power plug of the power cable to a standard wall outlet.


When the FSD-1008HP receives power, the Power LED should remain solid Green.

## 3.2 Rack Mounting

To install the FSD-1008HP in a 19-inch standard rack, follow the instructions described below.

**Step 1:** Place your FSD-1008HP on a hard flat surface, with the front panel positioned towards your front side.

**Step 2:** Attach a rack-mount bracket to each side of the FSD-1008HP with supplied screws attached to the package. Figure 3-2 shows how to attach brackets to one side of the FSD-1008HP.

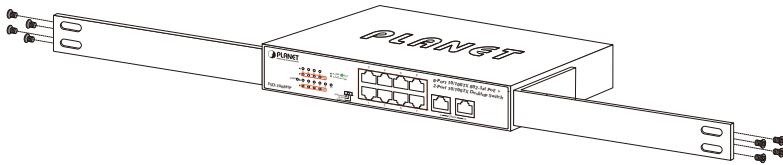

**Figure 3-2:** Attaching the Brackets to the FSD-1008HP.




You must use the screws supplied with the mounting brackets. Damage caused to the parts by using incorrect screws would invalidate the warranty.

**Step 3:** Secure the brackets tightly.

**Step 4:** Follow the same steps to attach the second bracket to the opposite side.

**Step 5:** After the brackets are attached to the FSD-1008HP, use suitable screws to securely attach the brackets to the rack, as shown in Figure 3-3.

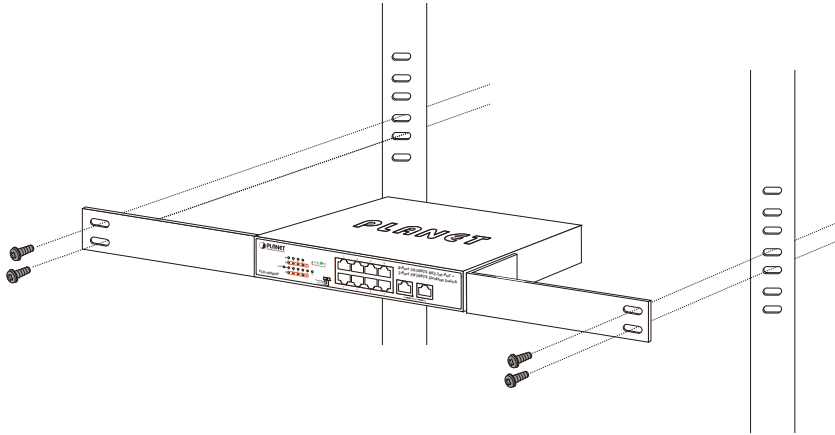

**Figure 3-3:** Mounting the FSD-1008HP in a Rack

**Step 6:** Proceed with Steps 4 and 5 of session 3.1 Desktop Installation to connect the network cabling and supply power to your Switch.

### 3.3 Wall Mounting Installation

**Step 1:** Please find the wall that can mount the FSD-1008HP.

**Step 2:** Install two screws on the wall.


**Step 3:** Hang the FSD-1008HP on the screws from the wall.

**Step 4:** Repeat step 5 of Desktop Installation for power supply to the FSD-1008HP.




Note

Before mounting the device to the wall, please check the location of the electrical outlet and the length of the Ethernet cable.

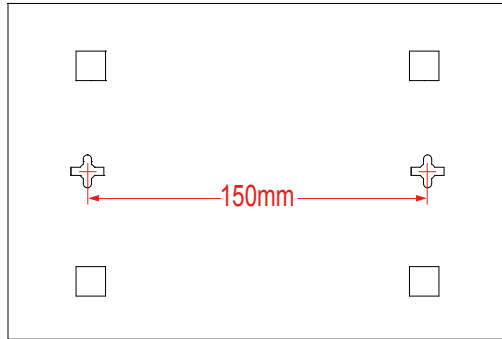

FSD-1008HP Switch Bottom Side

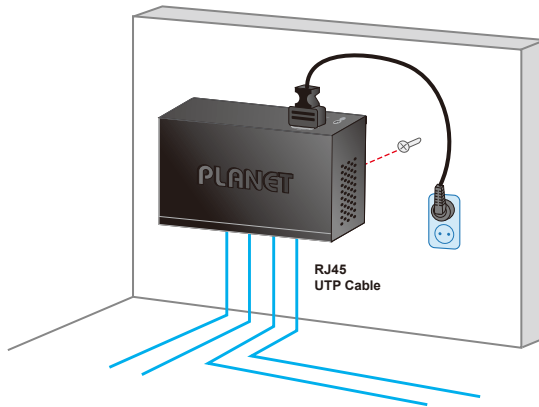

## 4 Product Specifications

Model	FSD-1008HP
Hardware Specifications	
Copper Port	10 10/100/BASE-TX MDI/MDIX Ports
PoE Injector Port	8-port with 802.3at/af PoE injector function with Port-1 to Port-8
Switch Architecture	Store-and-Forward
Switch Fabric	2Gbps/non-blocking
Switch Throughput@64 bytes	1.48Mpps@64 bytes
MAC Address Table	1K entries, automatic source address learning and aging
Maximum Frame Size	1522 bytes
Flow Control	IEEE 802.3x pause frame for full-duplex Back pressure for half-duplex
LED	System: <ul style="list-style-type: none"> <li>■ Power (Green)</li> </ul> 10/100BASE-TX RJ45 interfaces: <ul style="list-style-type: none"> <li>■ 10/100Mbps LNK/ACT (Green)</li> </ul> PoE interfaces: <ul style="list-style-type: none"> <li>■ PoE-in-Use (Amber)</li> </ul>
DIP Switch	Selectable operation mode <ul style="list-style-type: none"> <li>■ Standard</li> <li>■ VLAN</li> <li>■ Extend</li> </ul>
Dimensions (W x D x H)	220 x 150 x 43 mm (1U height)
Enclosure	Metal
Weight	1166 g
Power Requirements	AC 100~240V, 50/60Hz, 2.5A max
Power Consumption/Dissipation	Max. 127 watts/433.3 BTU
Thermal Fan	Fanless

Power over Ethernet	
PoE Standard	IEEE 802.3af Power over Ethernet/PSE IEEE 802.3at Power over Ethernet Plus/PSE
PoE Power Supply Type	End-span
PoE Power Output	Per port 54V DC, 540mA. max. 30 watts
Power Pin Assignment	1/2(+), 3/6(-)
PoE Power Budget	120 watts
Max. Number of Class 2 PDs	8
Max. Number of Class 3 PDs	8
Max. Number of Class 4 PDs	8
Standards Conformance	
Regulatory Compliance	FCC Part 15 Class A, CE
Standards Compliance	IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x Flow control and back pressure IEEE 802.3af Power over Ethernet IEEE 802.3at Power over Ethernet Plus IEEE 802.3az Energy Efficient Ethernet (EEE)
Environment	
Operating	Temperature: 0 ~ 50 degrees C Relative Humidity: 5 ~ 95% (non-condensing)
Storage	Temperature: -10 ~ 70 degrees C Relative Humidity: 5 ~ 95% (non-condensing)



---

## 5. Troubleshooting

This chapter contains information to help you solve issues. If the FSD-1008HP is not functioning properly, make sure the FSD-1008HP was set up according to instructions in this manual.

### **Q1: The Link LED is not lit.**

#### **Solution:**

Check the cable connection and also try to swap one new cable.

### **Q2: 100BASE-TX port link LED is lit, but the traffic is irregular.**

#### **Solution:**

Make sure the attached device is not set to full duplex. Some devices use a physical or software switch to change duplex modes. Auto-negotiation may not recognize this type of full-duplex setting.

### **Q3: Why the Switch isn't connected to the network.**

#### **Solution:**

Check the LNK/ACT LED on the FSD-1008HP. Try another port on the FSD-1008HP. Make sure the cable is installed properly. Make sure the cable is the right type. Turn off the power. After a while, turn on the power again.

### **Q4: Why the FSD-1008HP, connected to PoE device, cannot be powered on.**

#### **Solution:**

Please check the cable type of the connection from the FSD-1008HP to the other end. The cable should be an 8-wire UTP, Category 5 or above and EIA568 cable within 100 meters. A cable with only 4-wire, short loop or over 100 meters will affect the power supply.

Please make sure the device is fully complied with IEEE 802.3af/IEEE 802.3at standard.

### **Q5: What is the power output of each PoE port?**

#### **Solution:**


1. Each PoE port supports 53-55V DC, 540mA and a maximum of 30 watts of power output. Detect and inject by the standard of IEEE 802.3at.
2. Each PoE port supports 53-55V DC, 290mA and a maximum of 15.4 watts of power output. Detect and inject by the standard of IEEE 802.3af.

## Appendix A - 10/100Mbps, 10/100BASE-TX

When connecting Switch to another Fast Ethernet switch, a straight-through or crossover cable might be necessary. Each port of the Switch supports auto-MDI/MDI-X detection, meaning you can directly connect the Switch to any Ethernet devices without making a crossover cable. The following table and diagram show the standard RJ45 receptacle/connector and their pin assignments:


RJ45 Connector Pin Assignment		
Contact	MDI Media Dependent Interface	MDI-X Media Dependent Interface-Cross
1	Tx + (transmit)	Rx + (receive)
2	Tx - (transmit)	Rx - (receive)
3	Rx + (receive)	Tx + (transmit)
4, 5	Not used	
6	Rx - (receive)	Tx - (transmit)
7, 8	Not used	

The standard cable, RJ45 pin assignment

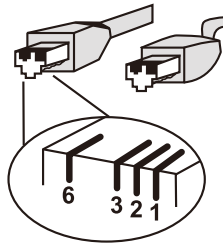

The standard RJ45 receptacle/connector

There are 8 wires on a standard UTP/STP cable and each wire is color-coded. The following shows the pin allocation and color of straight-through cable and crossover cable connection:

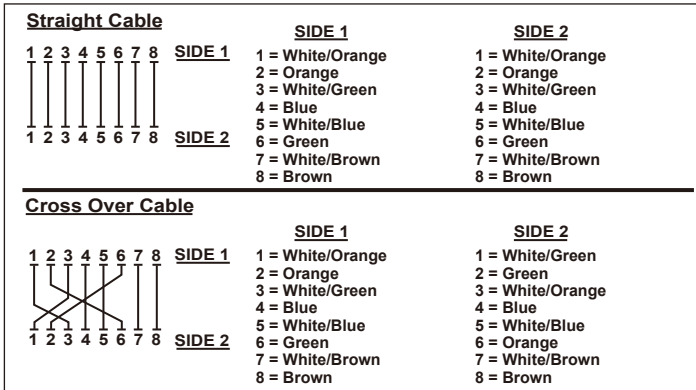

**Figure A-1:** Straight-through and Crossover Cable

Please make sure your connected cables are with the same pin assignment and color as the above description before deploying the cables into your network.

